



Configuration Utility Notes Standard Flooded Lead Acid

This Configuration Utility program is designed to optimize the WS500 Alternator Regulator to support charging for standard, thin-plated flooded lead acid batteries. Current sensing via current shunt, and installation of a battery temperature sensor are strongly recommended. Configuration details:

- Charging is managed by the WS500.
- WS500/BT Battery Temperature Sensor is recommended to ensure accurate temperature compensation and over-temperature protection.
- Alternator temperature target is set at 100°C with standard pull backs. See Configuration Utility User's Guide for adjustment instructions.
- Bulk charge voltage is set at 14.8V, with float voltage set at 13.5V in a standard 12V system.
- Exit amps @ bulk charge is set at 1% of capacity.
- Default Battery Capacity Multiplier is set at zero (500AH). See Configuration Utility User's Guide for instruction on modifying this value to match your system.
- Engine warmup delay is 30 sec.
- Values included in this profile are equal to those provided in DIP switch position #2 on the regulator.

IMPORTANT: The information is provided for reference, and is intended to provide guidance required to tailor the configuration profile to your system. Please refer to the Wakespeed Communications and Configuration Guide and Configuration Utility Users Guide for detailed configuration instructions.
